

Installation guide acoustic wall panels with high tack glue.

Thank you for choosing our acoustic wall panels for your new project!

This installation guide will help you step by step. Do you still have questions after reading the guide? Please feel free to contact one of our specialists.



Required materials and tools for mounting with high tack glue.

Mounting glue



Caulking gun



Tape measure



Square



Buzz saw /
handsaw



Sharp stanley knife



Pencil



And of course,
good mood!




Step 1: Clear the wall.



Always start with a clean and bare wall.
Clear the wall of screws, nails and other
obstacles.

**NB; Electrical sockets do not need to be
removed as they can be easily be sawed
out and cut out.**

Step 2: Measure the wall and mark this on the acoustic wall panel.

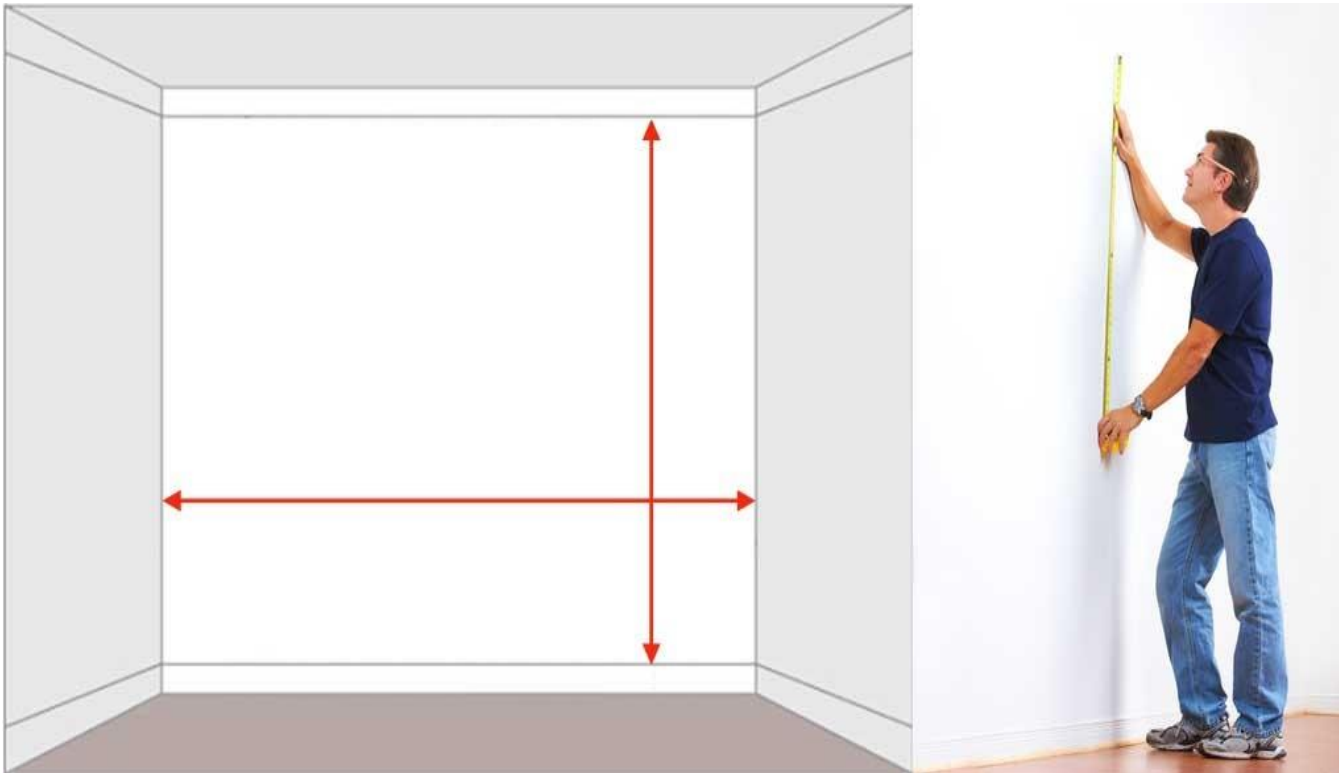

Measure the exact width and height of the wall or walls in question.

NB; Measure the height in different places as there may be differences!

Step 3: Cut the acoustic wall panels to size.



You can saw the acoustic wall panels with a circular saw or hand saw. We recommend using a guide rail for a straight cut. (Cover the cut with painter's tape).

TIP; Use a jigsaw to cut out the electric sockets.

Step 4: Mount the acoustic wall panels against the wall with the high tack glue.



In this last step we will attach the acoustic wall panels. Apply the high tack mounting glue and then attach the panels in the desired location.

TIP; Apply the mounting glue evenly with stripes of glue, not dots.

Step 5: Congratulations, now it's time to enjoy!



Congratulations! Your wall is finished.